HOME
DECORATORS
COLLECTION

2 Light Flush Mount
Sydney
Home Depot SKU 168-219 (UPC 718212271827)
(Chrome Finish)

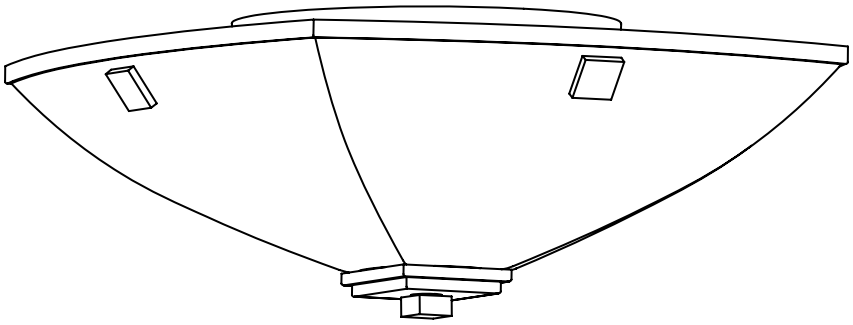

INSTRUCTION MANUAL

LA-2029E/S/F

Thank you for purchasing this Home Decorators Collection interior light fixture. This product has been manufactured with the highest standards of safety and quality.

FEATURES:

1. Traditional 2 Light Flush Mount in Chrome Finish.

2. Timeless Elegant Design.

3. Easy to assemble and install.

QUESTIONS, PROBLEMS, MISSING PARTS:

Before returning to your local Home Depot, please call our Customer Service Team at 1-800-986-3460 or visit www.homedepot.com. Please reference your SKU (168-219 Chrome fixture) or UPC (718212271827 Chrome fixture).

CAUTION:

1. Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.

2. CONSULT A QUALIFIED ELECTRICIAN IF YOU HAVE ANY ELECTRICAL QUESTIONS.

3. If you have any non-electrical questions about this fixture, please contact our Customer Service Team at 1-800-986-3460 or visit www.homedepot.com. Please reference your SKU (168-219 Chrome fixture) or UPC (718212271827 Chrome fixture).

4. Keep your receipt and these Instructions for Proof of Purchase.

TOOLS REQUIRED FOR ASSEMBLY & INSTALLATION (not included):

Light Bulb
(60 watt maximum)

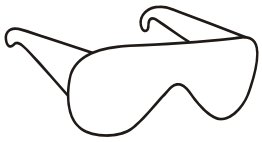

Safety goggles

Step Ladder

Wire strippers



Flathead screwdriver



Phillips screwdriver

Electrical tape

Wire cutters

PARTS INCLUDED FOR ASSEMBLY (parts are not to scale):



1 Ceiling Pan (#1)

1 Nipple (#2)



1 Cap (#7)

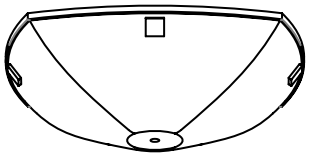

1 Glass Shade (#5)

1 Finial (#8)



2 Plastic Washer (#4)

2 Metal Washer (#3)

1 Hex Nut (#6)

ASSEMBLY INSTRUCTIONS:

1. Shut off power at the fuse box or circuit breaker box. Remove the old fixture from ceiling, including the mounting hardware.
2. Carefully unpack your new fixture and lay out all the parts on a clear area. Take care not to lose any small parts necessary for installation.

ASSEMBLY:

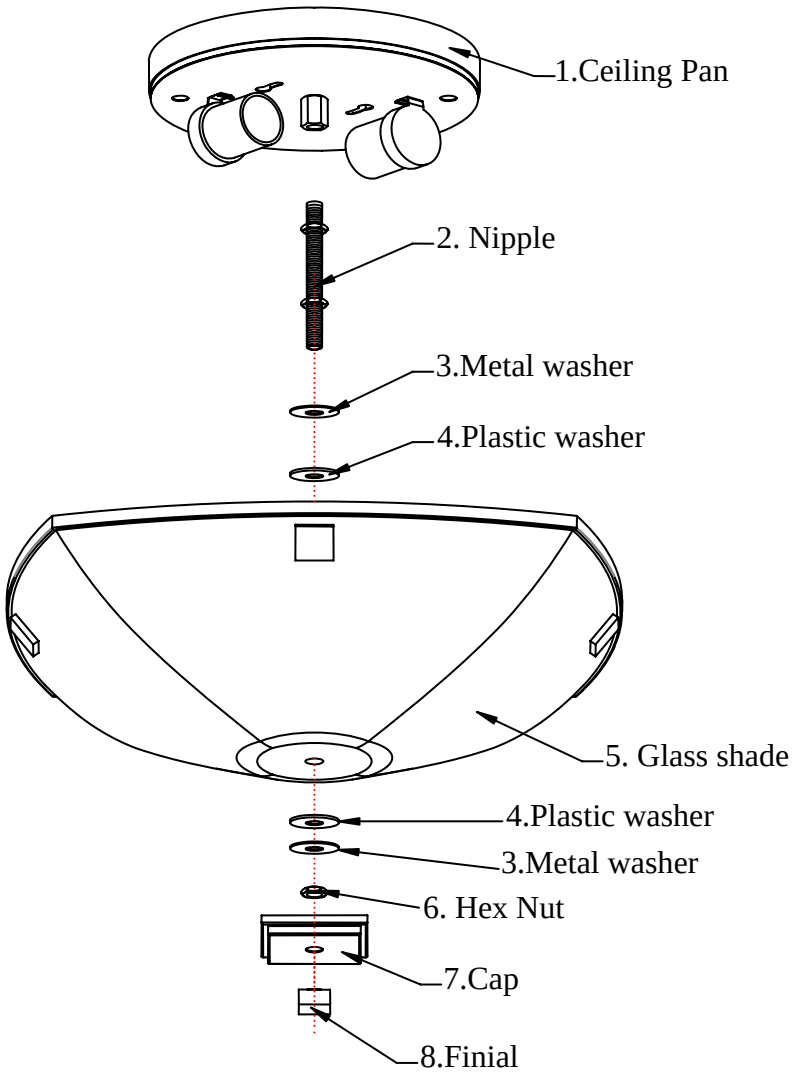
1.Ceiling Pan
2. Nipple
3.Metal washer
4.Plastic washer
5. Glass shade
4.Plastic washer
3.Metal washer
6. Hex Nut
7.Cap
8.Finial

PARTS INCLUDED FOR INSTALLATION (parts are not to scale):



2 Mounting Screws (#9)



1 Ground Screw (#10)



2 Outlet box Screw (#11)

1 Crossbar (#12)

3 Wire Connector (#13)

INSTALLATION INSTRUCTIONS:

1. Thread the two Mounting Screws (#9) about 1/4" into the pre-drilled holes in the Crossbar (#12) spaced the same distance apart as the holes in the Ceiling Pan (#1).
2. Attach the Crossbar (#12) to the Outlet Box (#14) using the two Outlet Box Screws (#11) as shown. The side of the Crossbar marked "GND" must face out.
3. While holding the Ceiling pan (#1) toward the ceiling, Connect the white wire from the fixture to the white wire from the Outlet Box (#14), and the black wire from the fixture to the black wire from the Outlet Box (#14). Cover the two wire connections using the two provided Wire Connectors (#13). Wrap the two wire connections with electrical tape for a more secure connection. If your outlet box has a ground wire (green or bare copper), connect fixture's ground wire to it using the wire connector (#13) and with electrical tape for a more secure connection. Otherwise connect the copper ground from the fixture to Ground screw (#10) on the Crossbar (#12). *Note: If you have electrical questions, consult your local electrical code for approved grounding methods.*
4. Finish mounting the Ceiling Pan assembly by placing it over the two Mounting Screws (#9) so they protrude through the "keyholes" in the bottom of the pan. Rotate the Pan until the screws are in the slots of the "keyholes" and tighten with a screwdriver.
5. Install the light bulb (not included) in accordance with the fixture's specifications. (DO NOT EXCEED THE MAXIMUM WATTAGE RATING!!)
6. Thread the Nipple (#2) into Ceiling Pan (#1). Place Metal Washer (#3), Plastic Washer (#4) and Glass Shade (#5) over the Nipple (#2). While holding the Glass Shade (#5), place Plastic Washer (#4), Metal Washer (#3) over the Nipple (#2) and tighten with Hex Nut (#6). Thread Cap (#7) over Nipple (#2) and tighten with Finial (#8).
7. Installation is complete. Turn on the power at the circuit breaker or fuse box. Turn the light switch on to activate the fixture.

INSTALLATION:

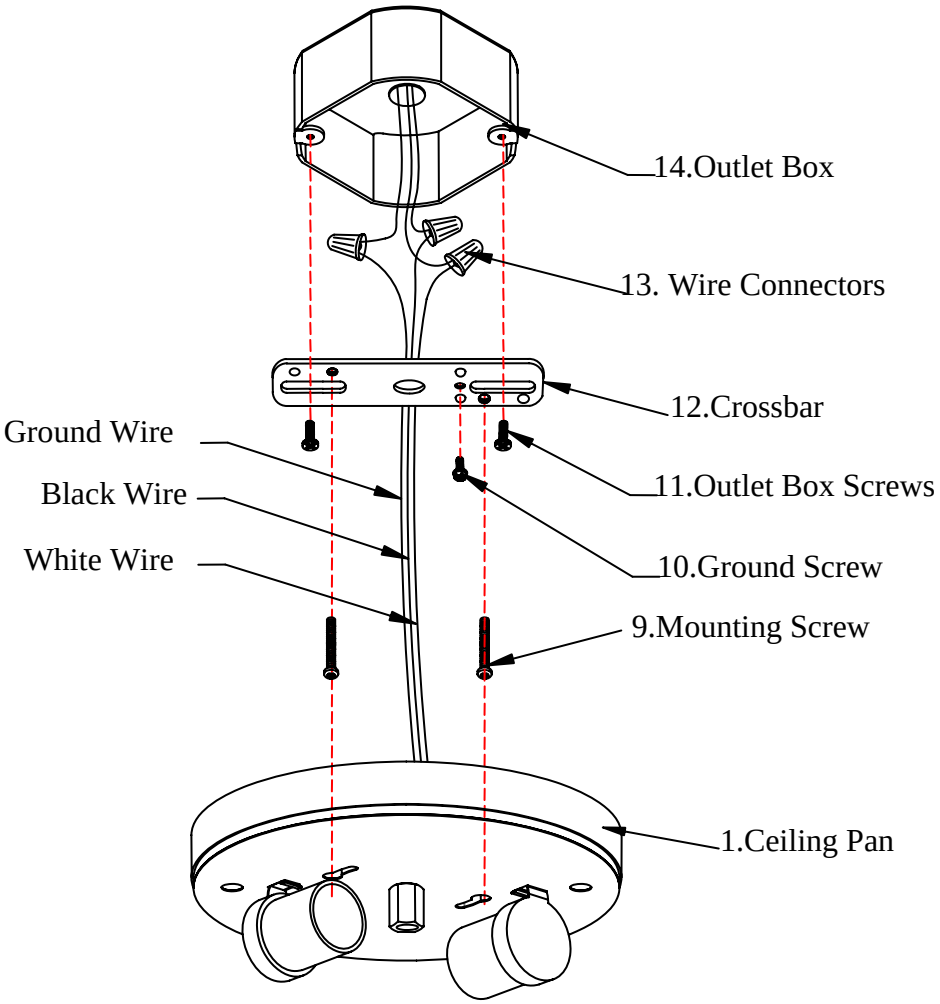

TROUBLESHOOTING:

	Possible Cause	Corrective Action
Bulb will not light.	1. Bulb is burned out.	1. Replace light bulb.
	2. Power is off.	2. Make sure power supply is on.
	3. Faulty wire connection.	3. Check wiring.
	4. Faulty switch.	4. Test or replace switch.
Fuse blows or circuit breaker trips when light is turned on.	Crossed wires or power wire is grounding out.	Check wire connections.

PRODUCT MAINTENANCE:

1. To clean the outside of the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the glass and surface of the fixture.
2. To clean the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the inside glass and interior surface of the fixture.
3. Do not use any cleaners with chemicals, solvents or harsh abrasives. Use only a dry soft cloth to dust or wipe carefully.

LIMITED WARRANTY

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of five (5) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear.

The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor / expense costs involved in the replacement or repair of said product.